

# METAL PHOTO EVIDENCE SCALES

Use Indoors or Out Regardless of the Weather

# SIRCHIE® FINGER PRINT LABORATORIES

## Photo Evidence Folding Scales

The **EFR400E** and **EFR400M**, smaller versions of our folding scales, are perfect when photographing evidence such as bullet casings, fingerprints, bone and glass fragments, etc. Its rugged, black anodized aluminum construction allow it to be used indoors or out regardless of the weather. This metal construction will withstand many years of consistent use.




Because the scales and angular measurements are precision laser-engraved on a metal structure, they are long-lasting and can easily become a permanent addition to your forensic tools. The **EFR400E** English scale measures 13.5" when fully extended and readily folds down to a mere 5.25" for convenient transportation and storage. The **EFR400M** metric scale measures 34.3cm fully extended and 13.3cm folded.

## Photo Marker Stands

The **PMM100E** and **PMM100M** Photo Marker Stands are designed to be used both horizontally and vertically. Constructed of rugged, black anodized aluminum, the PMM100 series of stands can be used indoors or out regardless of the weather.

Precision laser-engraved scales and angular measurements are provided in English or metric on the base and swing arms. This configurable unit can easily accommodate the multitude of scenarios facing the crime scene photographer today. The Photo Marker Stand is also designed to work in conjunction with any of our photo evidence indicators, magnetic photo tag stands, as well as our numbered placard cards (each sold separately).

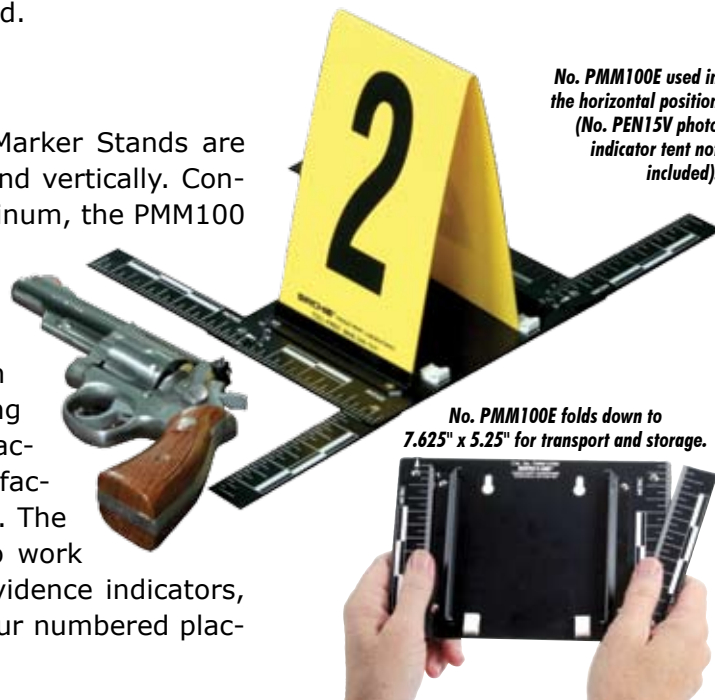


No. **PMM100E** used in the horizontal position (No. **PEN15V** photo indicator tent not included).

No. **PMM100E** folds down to 7.625" x 5.25" for transport and storage.

CAT. NO.	DESCRIPTION	PRICE
EFR400E	English Photo Evidence Folding Scale	\$16.95
EFR400M	Metric Photo Evidence Folding Scale	\$17.95
PMM100E	Photo Marker Stand, English	\$48.95
PMM100M	Photo Marker Stand, Metric	\$49.15
PMNM9	Optional Reversible Number Placards 0-9, 4" x 4" (10.2cm x 10.2cm) <i>not pictured</i>	\$32.95

# METAL PHOTO EVIDENCE SCALES

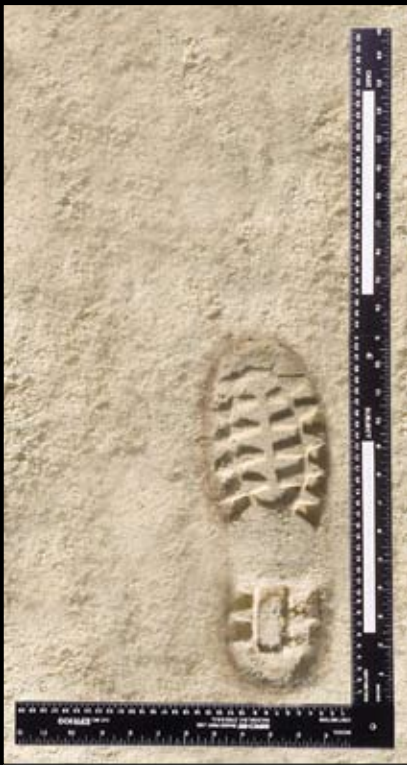

No. EFR100 Right Angle Configuration



No. EFR100

*Photographs taken at a crime scene provide a permanent record of the scene, related areas and physical evidence. The use of scales in these photographs shows the appropriate scale of the items being photographed.*


## Metal Photo Evidence Folding Scale

The **EFR100** folding scale is a must when photographing evidence such as handprints, footprints, tire tracks and physiological fluid dispersion. When it is opened at a right angle, the scale verifies any departure of the camera from a true vertical or horizontal position. All markings precision laser engraved. Scaling: 0" to 24" (0cm to 60cm) x 0" to 12" (0cm to 30cm).

## Metal Forensic Scales

These scales are designed primarily for forensic professionals involved with the study of anatomy, growth and disease of teeth. They are precision laser-engraved on rugged, black anodized aluminum which makes them long-lasting and more durable than traditional scales.


The **PPS800EMM** two-sided scale (shown to the left) has English measure on one side with metric on the other and includes crosshairs at each end. The **PPS800EM** scale is strictly English measure and the **PPS800MM** scale is strictly metric.

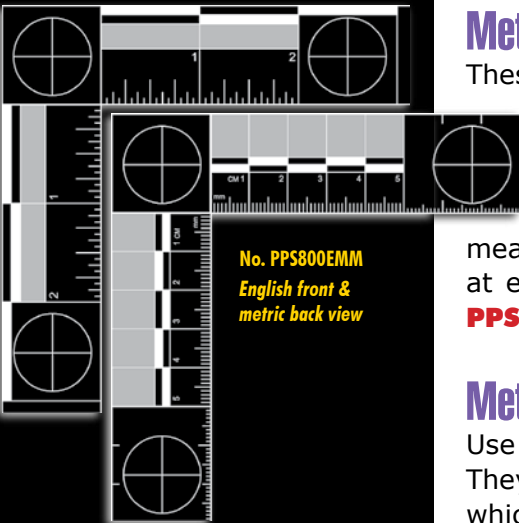

No. PPS800EMM  
English front &  
metric back view

## Metal Photo Evidence Scales

Use these scales when photographing evidence for precise measurement. They are precision laser-engraved on rugged, black anodized aluminum which makes them long-lasting and more durable than traditional scales. The **PPSM403** 6" (15.24cm) scale has both English and metric measure and includes crosshairs at each end. For photographing smaller evidential items, two shorter metric scales are available: the **PPSM300** 10cm scale which includes crosshairs at each end and the **PPSM301** 5cm scale.

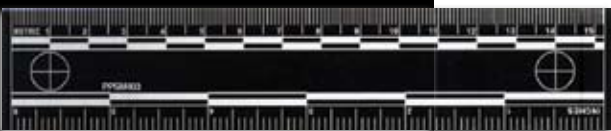

No. PPSM403



No. PPSM300



No. PPSM301

CAT. NO.	DESCRIPTION	PRICE
EFR100	Metal Photo Evidence Folding Scale	\$29.95
PPSM403	6" (15.24cm) Metal Photo Evidence Scale, Black	\$9.95
PPSM300	10cm Metal Evidential Photo Scale	\$8.95
PPSM301	5cm Metal Evidential Photo Scale	\$5.95
PPS800EM	English Metal Forensic Scale, 4.125" x 4.125"	\$15.95
PPS800MM	Metric Metal Forensic Scale, 105mm x 105mm	\$15.95
PPS800EMM	Two-Sided English/Metric Metal Forensic Scale	\$21.95