

**DON'T BLOW
IODINE FUMING!
Save Your Breath Instead**

ElectroFume™ IODINE FUMER

FUM250 SPECIFICATIONS:

Dimensions: 3.125" x 5.75" x 1.625"
(7.9cm x 14.6cm x 4.1cm)
Weight w/batteries: 14.1 oz. (400g)

FUM250 CONTENTS:

- 1-FUM250 ElectroFume™ Iodine Fumer
- 2-D-Cell Alkaline Batteries
- 4-DF201 Fumette Disposable Iodine Fuming Guns
- 4-DCA1 Iodine Print Enhancers
- 1- FUM250CC Black Molded Copolymer Carrying Case, Textured; Dimensions: 9.5" x 6.5" x 3.5" (24.1cm x 16.5cm x 8.9cm); Weight: 2.03 lbs. (921g)

The FUM250

ElectroFume™ Iodine Fumer Kit has a dual purpose. It saves your breath when fuming with iodine and provides a quick, efficient means of developing latent prints on porous surfaces such as paper, cardboard, raw wood, etc.

The FUM250 features a high-volume, battery-operated air pump. This handheld unit weighs a mere 14.1 oz. (400g) with batteries and is supplied with both Fumette Disposable Iodine Fuming Guns and Iodine Print Enhancers. All of which are conveniently contained in a rugged ABS carrying case.



No. FUM250 Kit and Components

CAT. NO.	DESCRIPTION	PRICE
FUM250	ElectroFume™ Iodine Fumer	\$99.69

Copyright© 2007 by SIRCHIE Finger Print Laboratories, Youngsville, N.C. All Rights Reserved.

FLR11.07-577ENG-REV3

Call **800-356-7311** Today or Order
On-Line at **www.sirchie.com**

SIRCHIE®
FINGER PRINT LABORATORIES

Fumette

DISPOSABLE IODINE FUMING GUNS

DF2016 Fumette Disposable Iodine Fuming Gun (shown to the left)


LEADING PARTICULARS:

- All plastic outer casing
- Pre-measured 2.0-gram iodine crystal ampoule
- No leakage—may be stored or carried anywhere
- Simple to use, efficient and totally effective
- Disposable and economical



DCA16 Iodine Print Enhancer (shown to the right)

State-of-the-art advancement in iodine fuming!

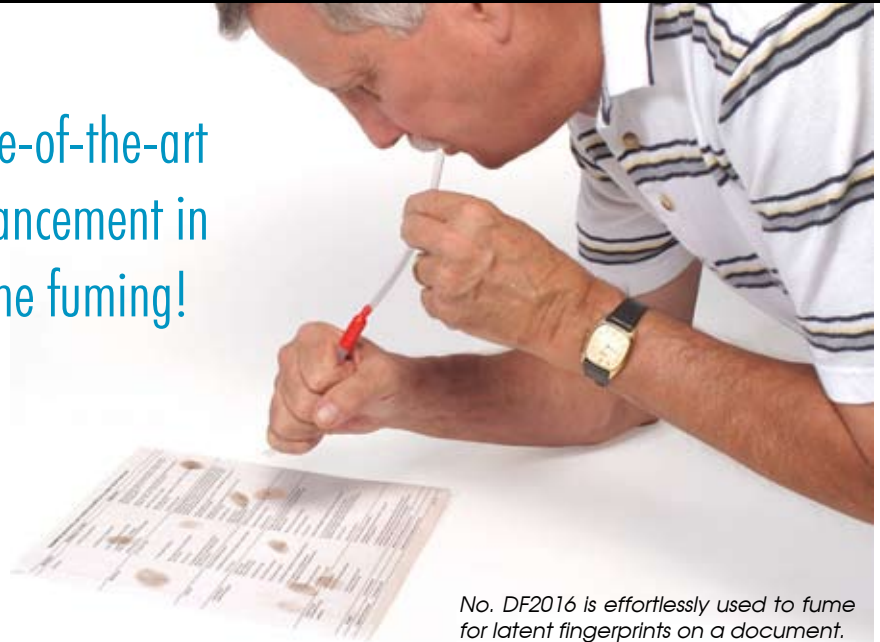

No. DF2016 is effortlessly used to fume for latent fingerprints on a document.

The DF2016 Fumette Disposable Iodine Fuming Gun is truly a state-of-the-art advancement in processing a crime scene for latent fingerprints through the use of iodine fuming.

The Fumette is compact and very effective for fuming walls and woodwork with iodine vapor for latent prints. The Fumette's design permits fuming both vertical and horizontal surfaces.

The Fumette is also excellent for fuming small objects with iodine vapor because it gives the user total control of the fuming operation. A hinged cap allows containment of iodine when not in use. When fuming is complete, simply recap and dispose of the whole assembly.

The DCA16 Iodine Print Enhancers come six (6) to a pack and are clean, convenient and easy-to-use. Each crushable glass ampoule contains 1ml of benzoflavone reagent housed in a plastic applicator tube. Simply crush the ampoule, remove the applicator tube cap and apply the reagent to the iodine developed print. Unlimited life and completely disposable.

CAT. NO.	DESCRIPTION	PRICE
DF2016	Fumette Disposable Iodine Fuming Gun, 6 ea.	\$28.75
DCA16	SEARCH® Iodine Print Enhancers, 6 ea.	\$23.25

Call **800-356-7311** Today or Order On-Line at **www.sirchie.com**

SIRCHIE®
FINGER PRINT LABORATORIES